



EVENT TIMER SETTING SIMPLIFIED.

There are 2 timers, timer 1 is an **on timer**, timer 2 is an **off timer**.

Lets say you want the timer to come on at 7am and then off again at 10 am. To set this follow below:-

Current time on display is say 6pm

Press setting button to you see timer 1, press up arrow to change display to on, now press okay.

Timer will now display 00:00 or similar. 00: is HOURS :00 is MINUTES

If you want the timer to come on at 7am and current time is 6pm you now need to set the delay time, thus you set the countdown timer to start after 13 hours (time difference between 6pm and 7am) Screen should read 13:00

After you have set delay press okay, timer 2 will now appear. If you require the heater to turn off after it has turned on, you need to set timer 2 to on and again set the delay. So to set for 10am, again presuming it is 6pm, the delay would be 16 hours. Screen should read 16:00

If set correctly the heater will come on at 7 am and switch off again at 10am

If you do not set an off timer, the heater will remain on until you manually turn it off using the power button.

Timers are a single event and need to be set each time you require heater to come on, it is not daily repetitive.

WARNING

Please be aware that not all insurance companies will accept or allow a diesel heater to be operated unsupervised. Utilising the timer for unattended starting is not recommended nor endorsed or approved by ACLS Retail.